





FRONT WHEEL/SUSPENSION

1. Slide the speedometer gear retainer into the wheel hub, aligning the tangs with the slots.

Install the left seal.

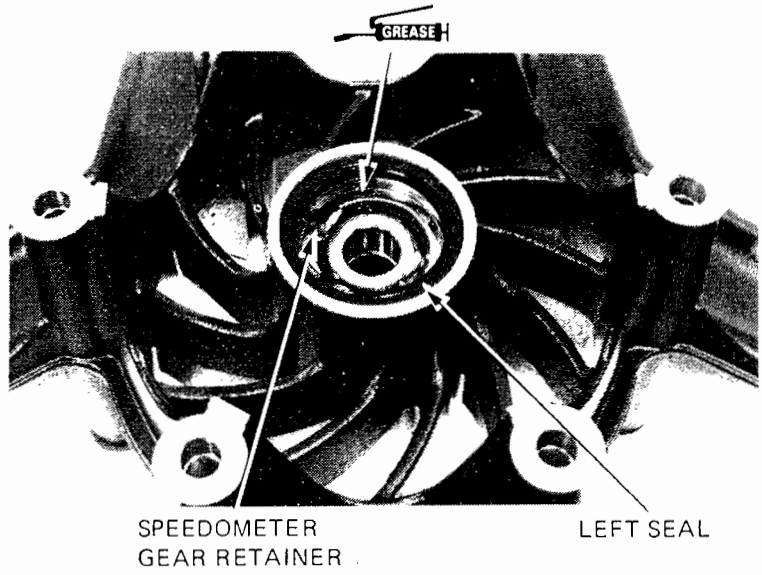

Install the right seal and side collar.

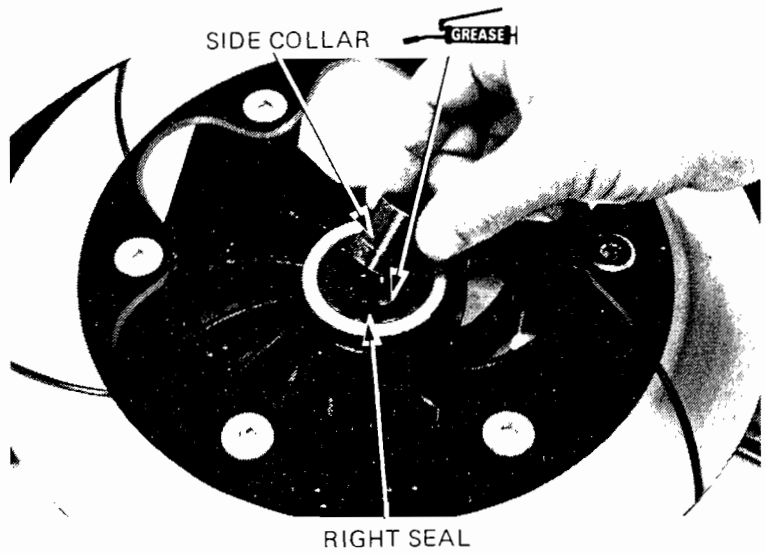

Install new gaskets onto the wheel hub.

