



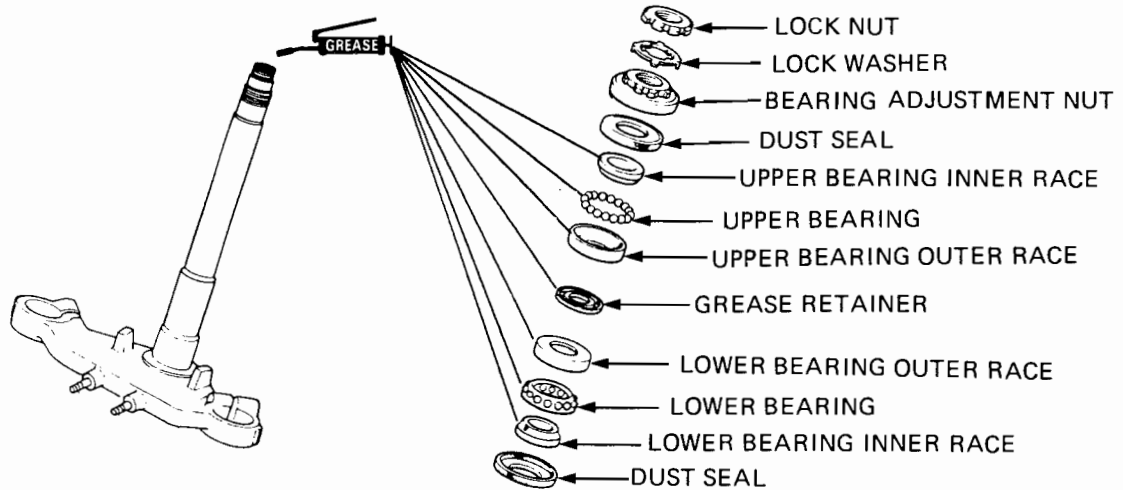

FRONT WHEEL/SUSPENSION

Remove the lower bearing inner race and dust seal from the steering stem.

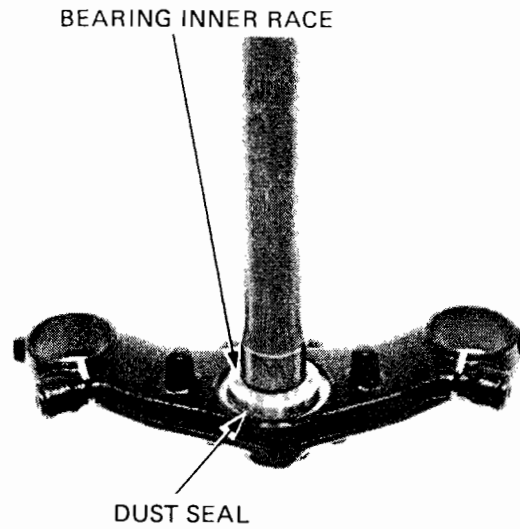

Install a new dust seal over the steering stem.
Install a new lower bearing inner race over the steering stem using a press.

STEERING STEM DRIVER 07946-MB00000

