
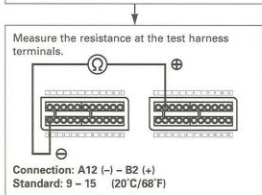



FUEL SYSTEM (Programmed Fuel Injection)

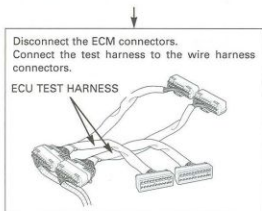

Out of range

- Open circuit in Black/White and/or Pink/Green wire

Normal

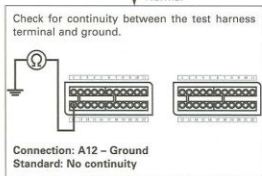

Continuity

- Short circuit in Pink/Green wire

No continuity

- Replace the ECM with a new one, and inspect it again