

### FUEL LINE INSPECTION

#### FUEL PRESSURE INSPECTION

##### NOTICE

- Before disconnecting fuel tubes, release the fuel pressure by loosening the service check bolt at the fuel tank.
- Always replace the sealing washers when the service check bolt is removed or loosened.

Open and support the front end of the fuel tank (page 3-4).  
Remove the air cleaner housing side cover (page 2-2).

Unhook the battery cover retainers, then open the battery cover.

Disconnect the battery negative cable from the battery terminal.

Disconnect the pressure regulator vacuum tube and plug the vacuum tube.

Cover the fuel hose sealing nut with a rag or shop towel.

Slowly loosen the fuel hose sealing nut and catch the remaining fuel using an approved gasoline container.

