

AIR CLEANER HOUSING

REMOVAL

Remove the throttle cables from the right handlebar switch housing (page 13-3).

Remove the following:

- fuel tank (page 5-49)
- air cleaner element (page 3-5)

Remove the vacuum tubes from the intake air duct control solenoid valve.

Disconnect the intake air duct control solenoid valve 2P connector.

Disconnect the cam pulse generator 2P connector.

Disconnect the crankcase breather tube from the air cleaner housing.

California type only: Disconnect the No.5 tube from the five way joint.

Disconnect the fuel injector 8P connector.

Disconnect the No 4 fuel injector 2P connector.

Remove the starter valve knob stay bolt.

