

THROTTLE BODY

REMOVAL

NOTE:

- Before disconnecting the fuel hose, release the fuel pressure by loosening the service check bolt.
- Always replace the sealing washer when the service check bolt is removed or loosened.

DISASSEMBLY

Remove the throttle body sub-harness from the TP (Throttle position) sensor. Disconnect the fuel injector connector from the throttle body.

Refer to page 5-54 for removal of the throttle body.

Disconnect the vacuum tubes from the throttle body.

Do not snap the throttle valve from full open to full close after the throttle cable has been removed. It may cause incorrect idle operation.

Loosen the insulator band screws and remove the insulators from the throttle body.

Disconnect the throttle cable ends from the throttle drum.

