



FUEL SYSTEM (Programmed Fuel Injection)

Loosen the lock nut and remove the starter valve assembly.

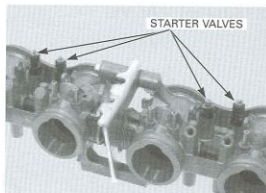

Do not apply commercially available carburetor cleaners to the inside of the throttle bore, which is coated with molybdenum.

Clean the starter valve bypass using compressed air.

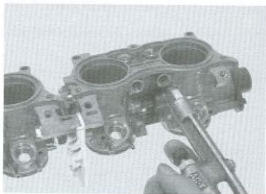

ASSEMBLY

