



Check the starter valve and spring for damage.

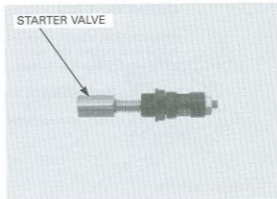


Install the starter valve assembly into the valve hole.

Tighten the starter valve lock nut to the specified torque.

**TORQUE: 2 N·m (0.18 kgf·m, 1.3 lbf·ft)**

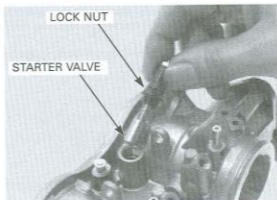

Install the starter valve shaft and three collars.

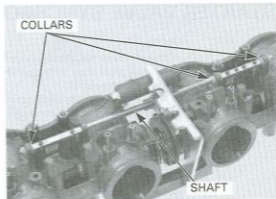

### LINK ARM

Install the link arm to the starter valve shaft and tighten the mounting screws to the specified torque.

**TORQUE: 1 N·m (0.09 kgf·m, 0.7 lbf·ft)**

