

# 6. COOLING SYSTEM

SYSTEM FLOW PATTERN	6-0	THERMOSTAT	6-6
SERVICE INFORMATION	6-1	RADIATOR	6-7
TROUBLESHOOTING	6-2	WATER PUMP	6-12
SYSTEM TESTING	6-3	RADIATOR RESERVE TANK	6-15
COOLANT REPLACEMENT	6-4		

## SERVICE INFORMATION

### GENERAL

#### WARNING

Removing the radiator cap while the engine is hot can cause the coolant to spray out, seriously scalding you. Always let the engine and radiator cool down before removing the radiator cap.

- If any coolant gets in your eyes, rinse them with water and consult a doctor immediately.
- If any coolant is swallowed, induce vomiting, gargle and consult a physician immediately.
- If any coolant gets on your skin or clothes, rinse thoroughly with plenty of water.

#### NOTICE

*Using coolant with silicate inhibitors may cause premature wear of water pump seals or blockage of radiator passages. Using tap water may cause engine damage.*

- Add coolant at the reserve tank. Do not remove the radiator cap except to refill or drain the system.
- All cooling system services can be done with the engine in the frame.
- Avoid spilling coolant on painted surfaces.
- After servicing the system, check for leaks with a cooling system tester.
- Refer to section 19 for fan motor relay and coolant temperature sensor inspection.