


THERMOSTAT INSTALLATION

Install the thermostat housing onto the cylinder head.

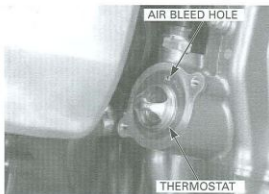


Install the new O-ring onto the thermostat housing cover.



Install the thermostat housing cover onto the cylinder head and tighten the housing cover bolts.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

Fill the coolant and bleed air from the system (page 6-5).

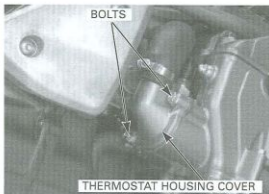**RADIATOR****REMOVAL**

Open and support the front end of fuel tank (page 3-4).

Drain the coolant (page 6-5).

Disconnect the lower radiator hose.

