



Remove the bolts and fan motor assembly.

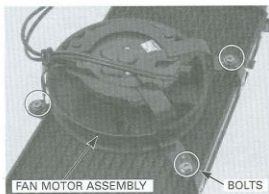

Remove the nut and cooling fan.

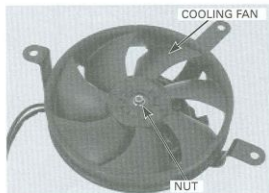

Remove the fan motor wire from the clamp.  
Remove the flange nuts and fan motor from the fan motor shroud.

