

Connect the water pump-to-water joint hose. Install the water pump cover, two SH bolts and two flange bolts.


Tighten the flange bolts to the specified torque.

**TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)**

Tighten the two SH bolts.

Connect the lower radiator hose and bypass hose, then tighten the clamp screws.

Fill the system with recommended coolant (page 6-5). Install the lower cowl (page 2-5).

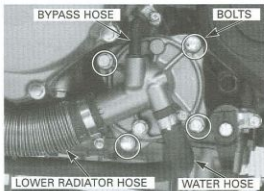


## RADIATOR RESERVE TANK

### REMOVAL

Remove the rear shock absorber (page 14-10).

Disconnect the siphon tube and drain coolant from the reserve tank.

Remove the radiator reserve tank.  
Drain the coolant.

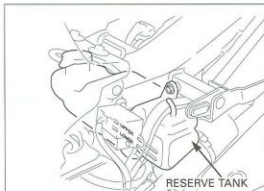

### INSTALLATION

Installation is in the reverse order of removal.

Install the flange collar and washer as shown.

Install the rear shock absorber (page 14-13).