



DRIVE SPROCKET REMOVAL

Loosen the drive chain (page 3-16).

Remove the drive sprocket cover bolts and sprocket cover.

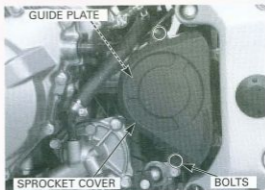

Remove the drive chain guide plate.

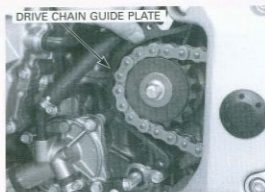

Loosen the swingarm pivot cover mounting bolts if necessary.

Remove the drive sprocket, washer and the drive sprocket with the drive chain from the countershaft.

