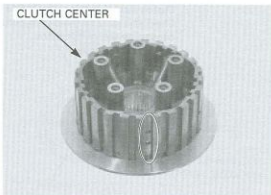
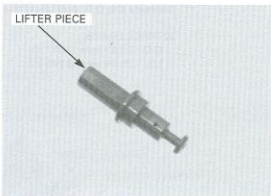


Clutch center

Check the grooves of the clutch center for damage or wear caused by the clutch plates. Replace if necessary.

**Clutch lifter piece**

Check the clutch lifter piece for damage or abnormal wear.


**Clutch disc**

Replace the clutch discs and plates as a set.

Replace the clutch discs if they show signs of scoring or discoloration.

Measure the disc thickness at each disc.

SERVICE LIMIT: 2.6 mm (0.10 in)

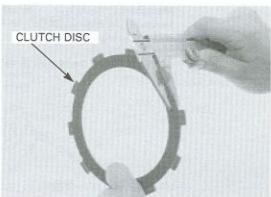**Clutch plate**

Replace the clutch discs and plates as a set.

Check each disc plate for warpage on a surface plate using a feeler gauge.

SERVICE LIMIT: 0.30 mm (0.012 in)

