

## CLUTCH/GEARSHIFT LINKAGE

### Clutch outer/clutch outer guide

Check the slots of the clutch outer for damage or wear caused by the clutch discs.  
Replace if necessary.

CLUTCH OUTER



Measure the O.D. and I.D. of the clutch outer guide.

### SERVICE LIMITS:

O.D.: 34.97 mm (1.377 in)


I.D.: 25.01 mm (0.985 in)



### Mainshaft

Measure the mainshaft O.D. at the clutch outer guide sliding surface.

SERVICE LIMIT: 24.96 mm (0.983 in)

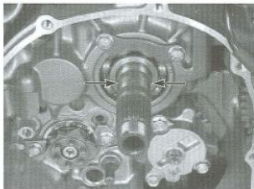

## CLUTCH OUTER NEEDLE BEARING REPLACEMENT

Press the needle bearing out of the clutch outer using the special tools.

### TOOLS:

Driver	07749-0010000
Attachment, 37 X 40 mm	07746-0010200
Pilot, 35 mm	07746-0040800

