


CLUTCH/GEARSHIFT LINKAGE

Install the outer clutch disc colored "Green" in the shallow slot on the clutch outer.

Install the clutch lifter piece.

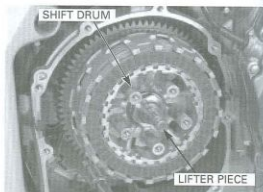


Install the pressure plate.

Install the clutch springs and spring bolts. Tighten the bolts in a crisscross pattern in 2 - 3 steps, then tighten the bolts to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

Install the right crankcase cover (page 9-14).

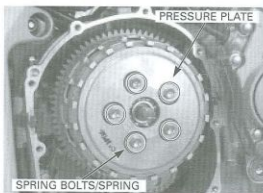


GEARSHIFT LINKAGE

GEARSHIFT LINKAGE REMOVAL

Remove the following:

- Right crankcase cover (page 9-3)
- Clutch assembly (page 9-4)

Remove the bolt and gearshift pedal link.

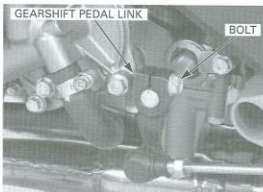

Pull the gearshift spindle assembly and thrust washer out of the crankcase.

