


HYDRAULIC BRAKE

Push the pad spring, then install the pad pin.


Tighten the pad pin.

TORQUE: 17 N·m (1.7 kgf·m, 12 lbf·ft)

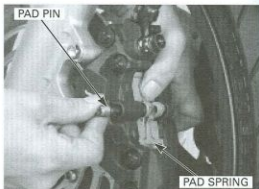

Install and tighten the pad pin plug.

TORQUE: 3 N·m (0.3 kgf·m, 2.2 lbf·ft)

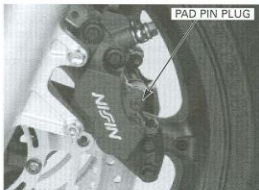

Always replace the brake pads in pairs to assure even disc pressure.

Check the brake fluid level in the brake master cylinder reservoir as this operation causes the level to rise.

REAR BRAKE PAD REPLACEMENT

Push the caliper pistons all the way in by pushing the caliper body inward to allow installation of new brake pads.



Remove the pad pin plug.

