


HYDRAULIC BRAKE

Remove the snap ring from the master cylinder body using the special tool as shown.

TOOL:


Snap ring pliers

07914-SA50001

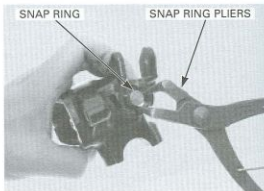

Remove the master piston and spring.

Clean the inside of the cylinder and reservoir with brake fluid.

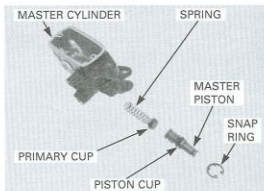

INSPECTION

Check the piston boot, primary cup and secondary cup for fatigue or damage.

Check the master cylinder and piston for abnormal scratches.

Measure the master cylinder I.D.

SERVICE LIMIT: 14.055 mm (0.5533 in)



Measure the master cylinder piston O.D.

SERVICE LIMIT: 13.945 mm (0.5490 in)

