


## HYDRAULIC BRAKE

*Be certain the snap ring is firmly seated in the groove.*


Install the push rod into the master cylinder.  
Install the snap ring.

**TOOL:**  
**Snap ring pliers** 07914-SA50001

Apply silicone grease to the boot inside.  
Install the boot.

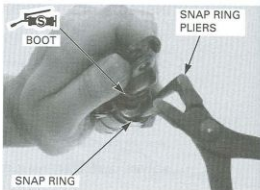


Apply brake fluid to a new O-ring and install it onto the reservoir joint.  
Install the reservoir joint into the master cylinder.

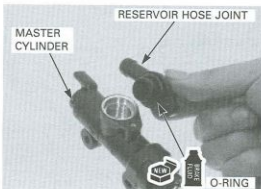

Install and tighten the screw securely.

Connect the reservoir hose to the reservoir joint.

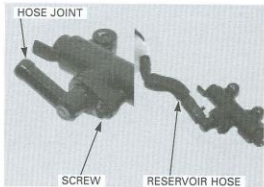

If the push rod is disassembled, adjust the push rod length as shown.  
After adjustment, tighten the lock nut to the specified torque.

**TORQUE: 17 N·m (1.7 kgf·m, 12 lbf·ft)**

