

IGNITION COIL

REMOVAL/INSTALLATION

NO.1/NO.4 coil

Open and support the front end of the fuel tank (page 3-4).

Remove the spark plug cap.
Disconnect the ignition primary wires.
Remove the bolts, clamp, spacers, collars, and ignition coil.



Installation is in the reverse order of removal.

NO.2/NO.3 coil

Open and support the front end of the fuel tank (page 3-4).

Remove the spark plug cap.
Disconnect the ignition primary wires.
Remove the bolts and ignition coil assembly.
Remove the bolts, spacer and bracket from the ignition coil.

Installation is in the reverse order of removal.

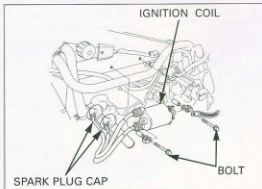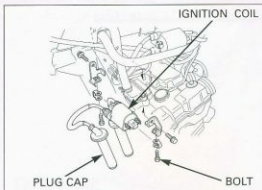


IGNITION PULSE GENERATOR

REMOVAL

Remove the side cover (page 3-4).

Disconnect the ignition pulse generator 2P (Red) connector.

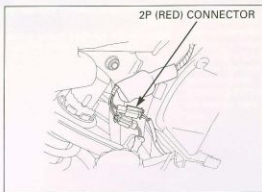

Remove the bolts and ignition pulse generator cover.

