


If the engine is out of frame, remove the alternator cover (page 10-2) and hold the flywheel with the flywheel holder (07725-0040000), then tighten the bolt.


Shift the transmission into 6th gear and apply the rear brake.

Tighten the ignition pulse generator rotor bolt to the specified torque.


TORQUE: 59 N·m (6.0 kgf-m, 43 lbf-ft)

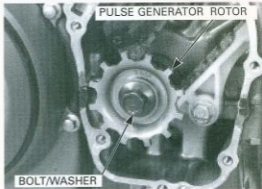

Install the ignition pulse generator into the cover. Apply sealant to the wire grommet, then install it into the groove of the cover.

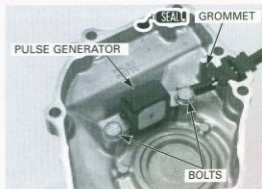

Apply sealant to the crankcase as shown.

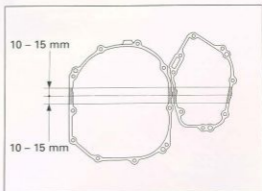

Apply sealant to the bolt threads, then install the bolts into the mark of the ignition pulse generator cover.

