



## IGNITION SYSTEM

Install the right crankcase cover.  
Install and tighten the ignition pulse generator cover bolts to specified torque.

**TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)**

Route the ignition pulse generator wire properly, connect the 2P (Red) connector.

Install the removed parts in the reverse order of removal.

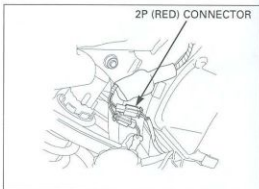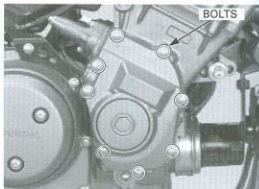

## IGNITION TIMING

Warm up the engine.  
Stop the engine and remove the timing hole cap.

*Read the instructions for timing light operation.*

Connect the timing light to the No.2 spark plug wire.

