


HEADLIGHT

BULB REPLACEMENT

Remove the headlight unit (page 19-5).
Disconnect the headlight bulb connector.
Remove the dust cover.

Remove the position light bulb from the socket.

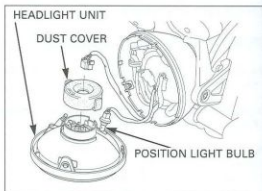

If you touch the bulb with your bare hands, clean it with cloth moistened with denatured alcohol to prevent early bulb failure.

Unhook the bulb retainer and remove the headlight bulb.

NOTICE

Avoid touching halogen headlight bulbs. Finger prints can create hot spots that cause a bulb to break.

Install a new bulb into the socket.

Install the new headlight bulb/socket aligning its tabs with the groove in the headlight unit.

Hook the bulb retainer into the headlight unit groove.

Install the dust cover tightly against the headlight unit with its arrow mark facing up.

Connect the headlight connector.

Install the headlight unit (page 19-5).

