




## ELECTRICAL SYSTEM

### HANDLEBAR SWITCH LED TROUBLESHOOTING

- When part of the LED on the right or the left of the handlebar switch does not light, replace the handlebar switch with a known good one →3-19, and recheck.

#### IT DOES NOT LIGHT UP ALL OF THE LED ON THE RIGHT OR THE LEFT OF THE HANDLEBAR SWITCH

- Speedometer (Connector connected) →4-34
- Loose or poor contacts of related terminal/connector
- Battery condition
- Burned fuse

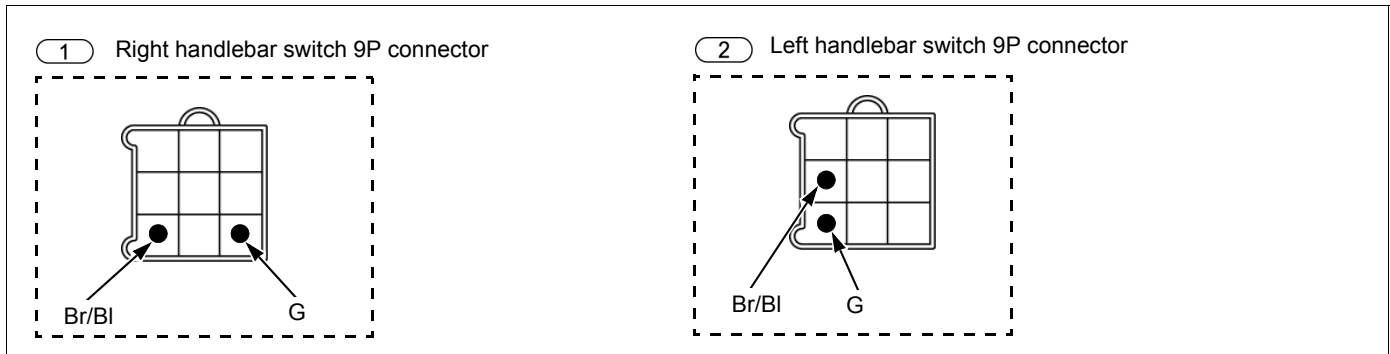

#### 1. Handlebar Switch LED Input Voltage Inspection

- Turn the lighting switch ON1 or ON2.
- Connection: Br/BI (+) – G (-)
- Does the voltage 2.4 V min. ?

Yes ▼

- Replace the right or left handlebar switch with a new one →3-19, and recheck.

No ►

- Faulty Br/BI or G wire