## SERVICE INFORMATION

## **GENERAL**

- · This section covers removal and installation of the body panels, exhaust system and seat rail.
- · Serious burns may result if the exhaust system is not allowed to cool before components are removed or serviced.
- · Always replace the exhaust pipe gaskets with a new one after removing the exhaust pipe from the engine.
- When installing the exhaust system, loosely install all of the exhaust pipe fasteners. Always tighten the exhaust pipe clamps first, then tighten the mounting fasteners.
- Always inspect the exhaust system for leaks after installation.

## **TORQUE VALUES**

Seat rail flange socket bolt/flange nut Seat rail special bolt/flange nut Seat rail assembly flange nut Seat rail brace socket bolt Passenger seat bracket special bolt Passenger seat bracket socket bolt Rider seat bracket mounting bolt/nut Rider footpeg bracket socket bolt Bank sensor Passenger footpeg bracket socket bolt Exhaust pipe joint nut Exhaust pipe mounting bolt Exhaust joint pipe clamp SH bolt Exhaust valve pulley nut Exhaust valve retaining screw Exhaust valve pulley housing flange SH Muffler pipe clamp bolt Upper cowl stay flange bolt Cowl stay mounting bolt Windscreen mounting screw Middle cowl pan screw Middle cowl special screw Upper cowl pan screw Upper cowl special screw Inner cowl special screw Front fender pan screw Rearview mirror socket bolt

59 N·m (6.0 kgf·m, 43 lbf·ft) 59 N·m (6.0 kgf·m, 43 lbf·ft) 30 N·m (3.1 kgf·m, 22 lbf·ft) 26 N·m (2.7 kgf·m, 20 lbf·ft) 26 N·m (2.7 kgf·m, 20 lbf·ft) 26 N·m (2.7 kgf·m, 20 lbf·ft) 9.8 N·m (1.0 kgf·m, 7 lbf·ft) 37 N·m (3.8 kgf·m, 27 lbf·ft) 11 N·m (1.1 kgf·m, 8 lbf·ft) 26 N·m (2.7 kgf·m, 20 lbf·ft) 12 N·m (1.2 kgf·m, 9 lbf·ft) 23 N·m (2.3 kgf·m, 17 lbf·ft) 9.8 N·m (1.0 kgf·m, 7 lbf·ft) 4.9 N·m (0.5 kgf·m, 3.6 lbf·ft) 1.5 N·m (0.15 kgf·m, 1.1 lbf·ft) 9.8 N·m (1.0 kgf·m, 7 lbf·ft)

18 N·m (1.8 kgf·m, 13 lbf·ft)
32 N·m (3.3 kgf·m, 24 lbf·ft)
12 N·m (1.2 kgf·m, 9 lbf·ft)
0.5 N·m (0.05 kgf·m, 0.4 lbf·ft)
1.5 N·m (0.15 kgf·m, 1.1 lbf·ft)
9.8 N·m (1.0 kgf·m, 7 lbf·ft)
1.5 N·m (0.15 kgf·m, 1.1 lbf·ft)
9.8 N·m (1.0 kgf·m, 7 lbf·ft)
9.8 N·m (1.0 kgf·m, 7 lbf·ft)
9.8 N·m (1.0 kgf·m, 7 lbf·ft)
12 N·m (1.2 kgf·m, 9 lbf·ft)
6.8 N·m (0.7 kgf·m, 5.1 lbf·ft)

# TROUBLESHOOTING

#### Excessive exhaust noise

- Broken exhaust system
- Exhaust gas leak

### Poor performance

- · Deformed exhaust system
- · Exhaust gas leak
- · Clogged muffler