




Remove the pan screws and passenger seat rear hook.

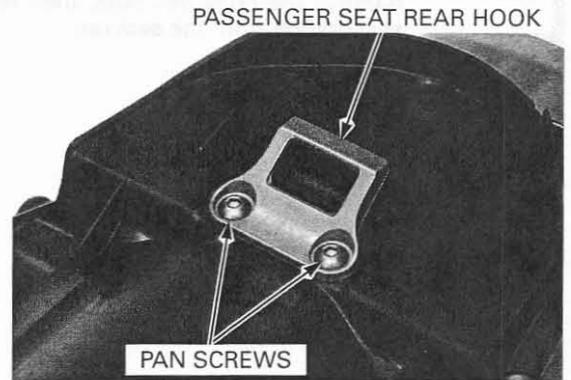

Remove the flange bolts and passenger seat hooks. Remove the passenger seat hook special bolts, then remove the passenger seat bracket.

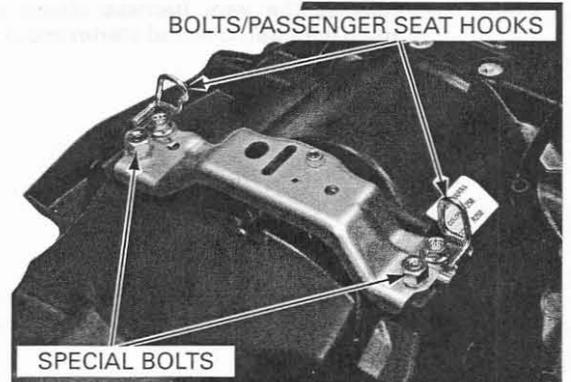

Unhook the seat lock cable from the seat lock lever, then remove the passenger seat bracket.

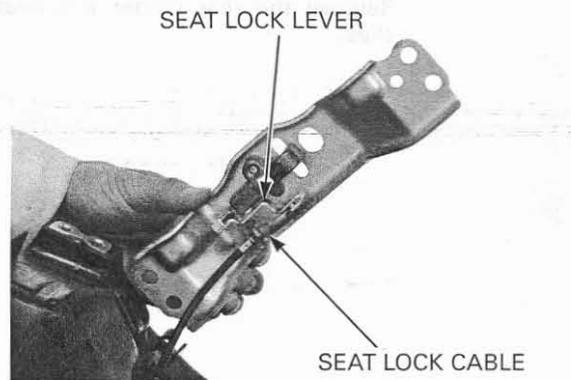

Disconnect the seat lock cable from the seat lock key cylinder. Remove the retainer and remove the seat lock key cylinder from the rear fender B.

