



Remove the muffler rear mounting bolts, then remove the muffler assembly.

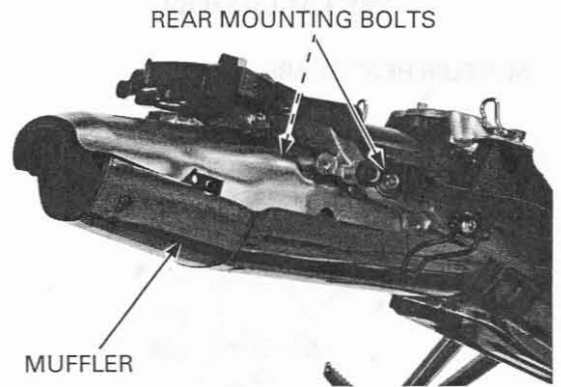

Remove the muffler heat guard front mounting bolt and nut.

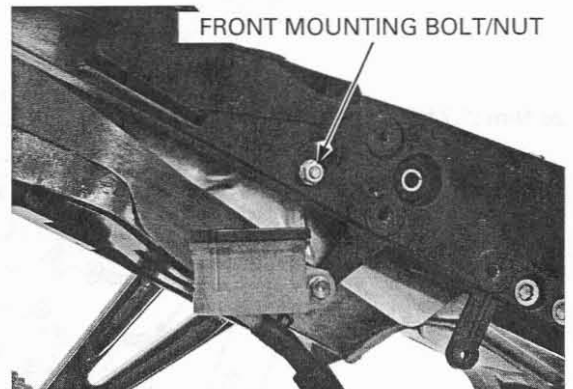

Remove the muffler heat guard rear mounting bolts, then remove the muffler heat guard.

