




Avoid damaging the radiator fins. Remove the bolt and radiator lower bracket from the engine.

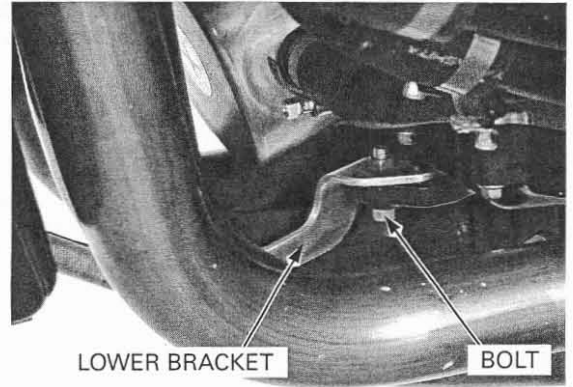

Remove the coolant reserve tank mounting bolt and filler neck mounting bolt.

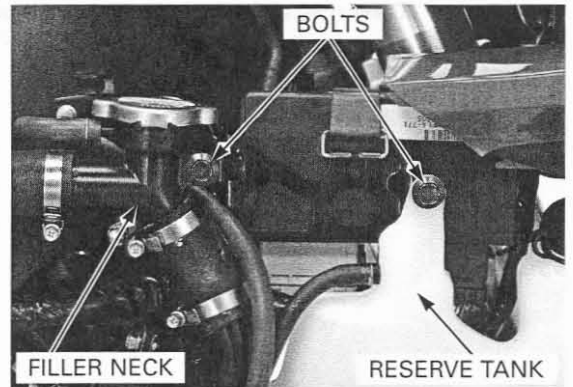

Disconnect the fan motor 2P (Black) connector.

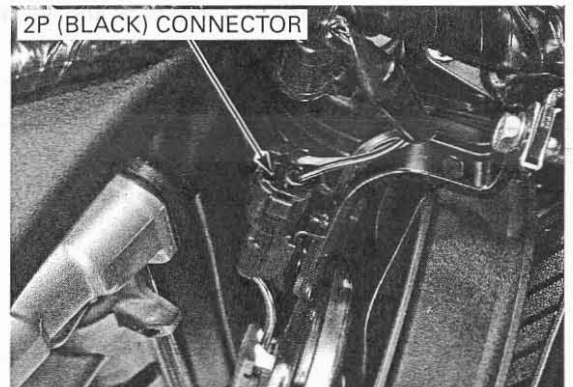

Remove the radiator upper mounting bolt.

