



Install the direct ignition coils.
Connect each connector to each direct ignition coil.

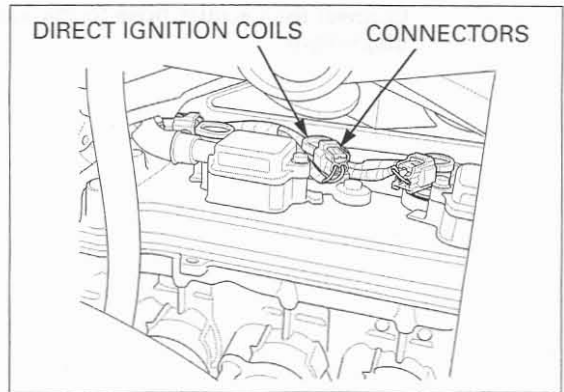

Remove the right front side cover (page 3-16).
Install the intake air duct assembly, while aligning its tab with the lower air cleaner housing base.
Make sure that the intake air duct is properly seated on the housing.

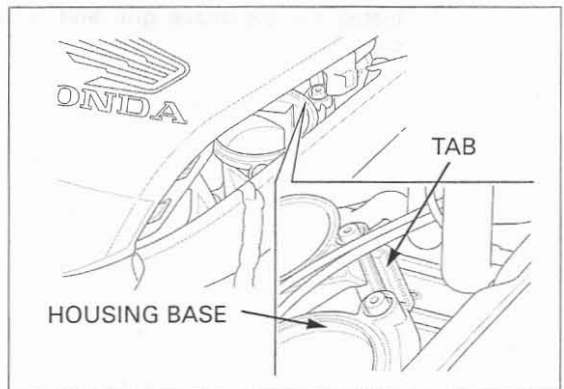

Install and tighten the intake air duct mounting screws.

TORQUE: 2.5 N·m (0.25 kgf·m, 1.8 lbf·ft)



Install and tighten the air duct mounting bolts.

