


## INSTALLATION

Always replace the packing with a new one.

Be careful not to damage the pump wire and fuel level gauge.

Place a new packing onto the fuel pump unit.


Install the fuel pump unit into the fuel tank.

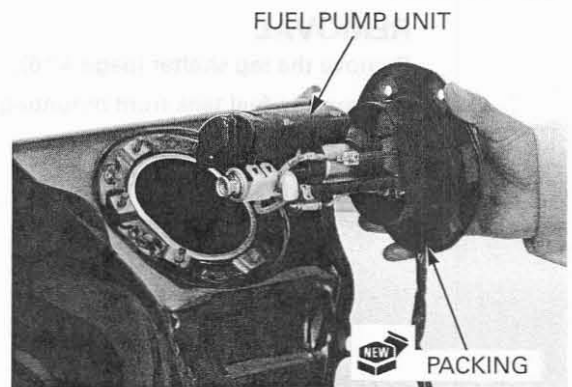

Install the hose guides and clamp and tighten the fuel pump unit mounting nuts in the specified sequence as shown.

**TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)**

Install the fuel tank (page 6-38).

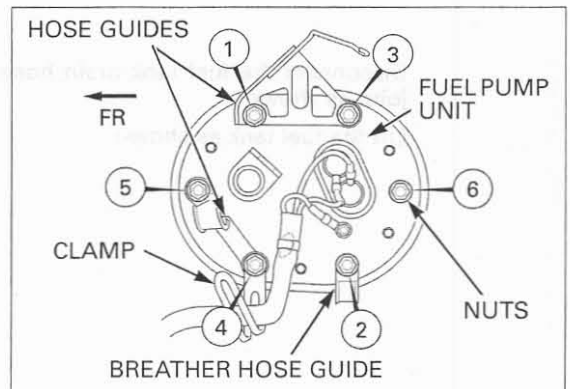

## FUEL CUT-OFF RELAY

### INSPECTION

Remove the fuel cut-off relay from the relay box (page 6-32).

Connect the ohmmeter to the fuel cut-off relay connector terminals.

**Connection: A - B**

Connect the 12 V battery to the following fuel cut-off relay connector terminals.

**Connection: C (+) - D (-)**

There should be continuity only when the 12 V battery is connected. If there is no continuity when the 12 V battery is connected, replace the fuel cut-off relay.

