


FUEL SYSTEM (Programmed Fuel Injection)

Disconnect the fuel pump unit 3P (Black) connector.

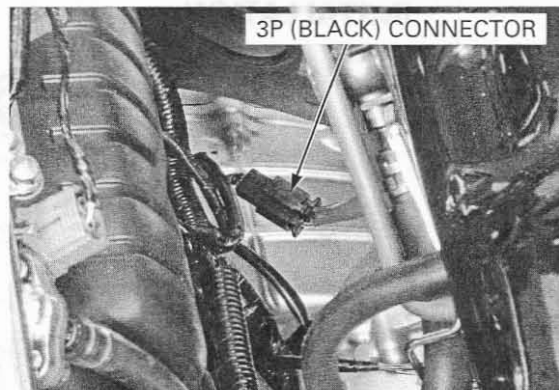

Disconnect the fuel tank drain hose and breather hose.



Cover the fuel hose banjo bolt with a rag or shop towel.

Slowly loosen the banjo bolt and catch the remaining fuel using a approved gasoline container.

Remove the fuel hose banjo bolt and sealing washers, then disconnect the fuel hose.

- Before disconnecting fuel hoses, release the fuel pressure by loosening the fuel feed hose banjo bolt at the fuel tank.
- Failure to release the fuel pressure could result in fuel spilling onto painted or plastic parts, which will be damaged.
- Always replace the sealing washers when the fuel feed hose banjo bolt is removed or loosened.



Remove the suitable support and close the fuel tank. Remove the fuel tank pivot bolts, collars and fuel tank.

Refer to procedures for fuel pump unit removal (page 6-34).

