

## FUEL SYSTEM (Programmed Fuel Injection)

Install and tighten the fuel tank front mounting bolts to the specified torque.

**TORQUE: 26 N·m (2.7 kgf·m, 20 lbf·ft)**

Tighten the fuel tank rear mounting bolts to the specified torque.

**TORQUE: 9.8 N·m (1.0 kgf·m, 7 lbf·ft)**

Install the top shelter (page 3-16).




## AIR CLEANER HOUSING

### REMOVAL


Remove the air cleaner elements (page 4-8).

Remove the screws and sub harness clamps.

Remove the five bolts and secondary injector mounting bracket from the air cleaner housing.

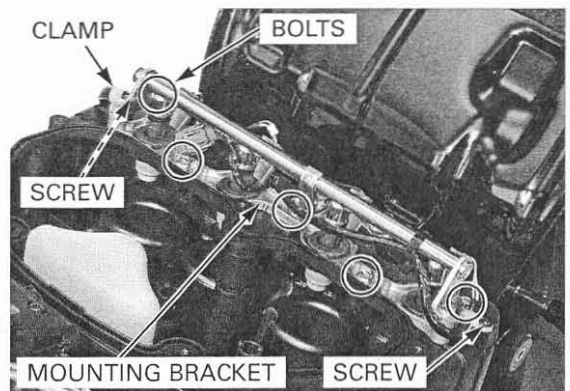

Remove the eight screws and upper air cleaner housing.

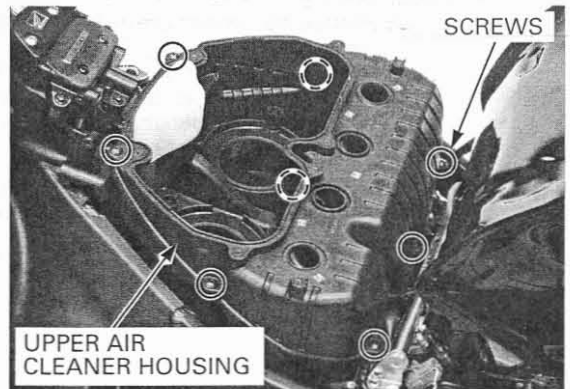

Remove the air funnel/air cleaner housing mounting screws, then remove the air funnels.

