

FUEL SYSTEM (Programmed Fuel Injection)

REMOVAL

- Before disconnecting fuel hoses, release the fuel pressure by loosening the fuel feed hose banjo bolt at the fuel tank.
- Failure to release the fuel pressure could result in fuel spilling onto painted or plastic parts, which will be damaged.
- Always replace the sealing washers when the fuel feed hose banjo bolt is removed or loosened.

Remove the wire band.



Remove the harness clamp screws.

Disconnect the secondary injector connectors.


Lift and support the fuel tank (page 4-5).

Do not apply excessive force or the fuel rail may be damaged.

Remove the fuel hose joint mounting bolts, then disconnect the fuel joint hose from the secondary injector fuel rail.

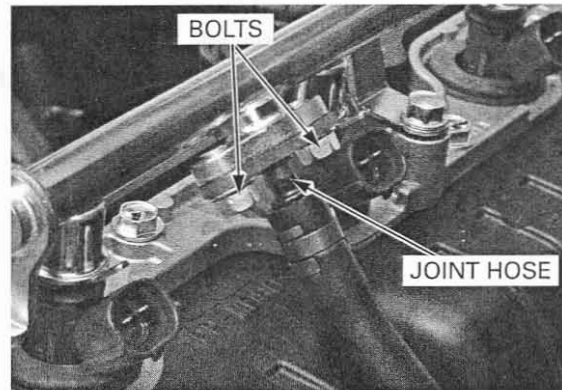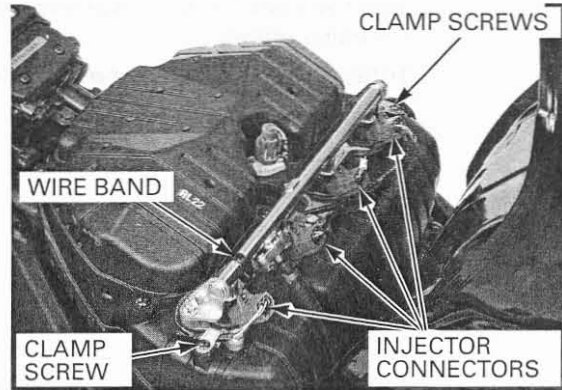

Remove the three fuel rail mounting bolts.

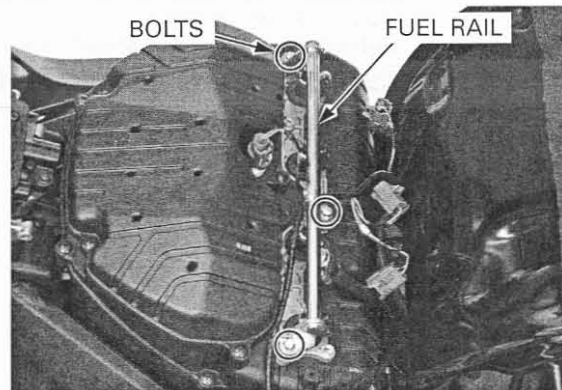

Remove the fuel rail/secondary injector assembly from the mounting bracket.

