

## FUEL SYSTEM (Programmed Fuel Injection)


Connect the vacuum hoses to the vacuum gauge.

**TOOL:**


Vacuum gauge set

07LMJ-001010B or  
07LMJ-001000A  
(U.S.A. only)

Connect a tachometer.

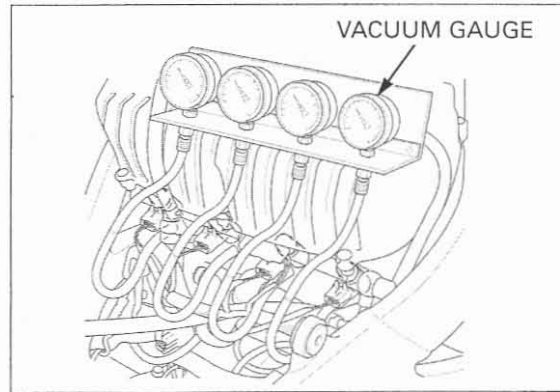

Disconnect the PAIR air suction hoses from the reed valve covers, then plug the covers.

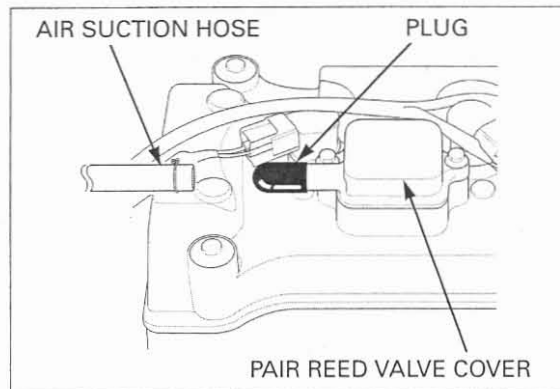

Start the engine and adjust the idle speed with the throttle stop screw.

**IDLE SPEED: 1,200 ± 100 rpm**



*The No.1 IAC valve cannot be adjusted, it is the base IAC valve.*

Match each intake vacuum pressure with the No.1 IAC valve.

**IAC VALVE VACUUM DIFFERENCE: 20 mmHg**

