


## CYLINDER HEAD/VALVES

Remove the gasket and dowel pins.

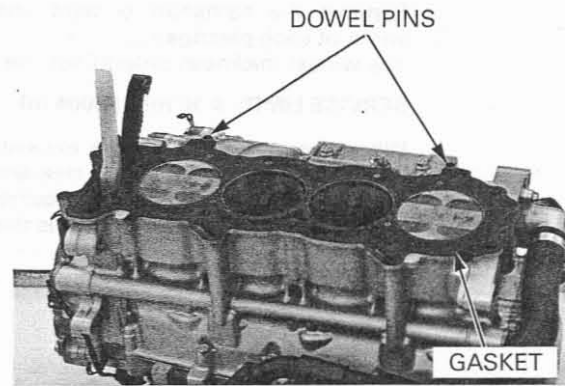


Remove the following:


- Right crankcase cover (page 10-15)
- Starter clutch (page 10-28)

Remove the torx bolt, washer, cam chain guide and pivot collar.

Remove the socket bolt, cam chain tensioner and washer.

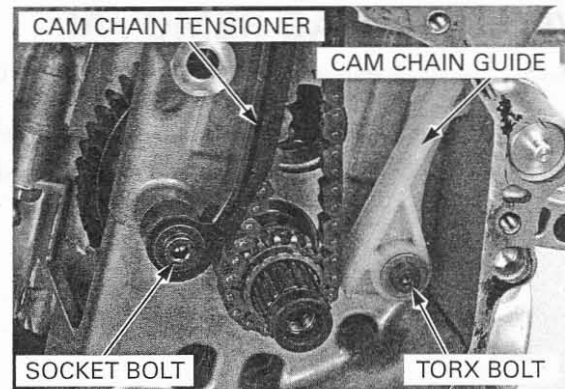

Remove the cam chain and timing sprocket from the crankshaft.

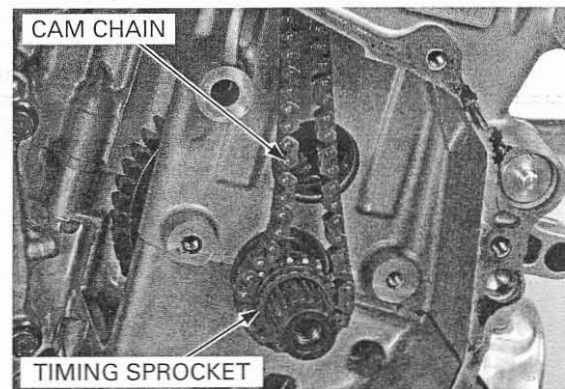

## CYLINDER HEAD DISASSEMBLY

Remove the cylinder head (page 9-13).

Remove the bolts and throttle body insulators from the cylinder head.

