


## CYLINDER HEAD/VALVES

### CAM CHAIN TENSIONER/CAM CHAIN GUIDE

Inspect the cam chain tensioner and cam chain guide for excessive wear or damage, replace them if necessary.


CAM CHAIN TENSIONER

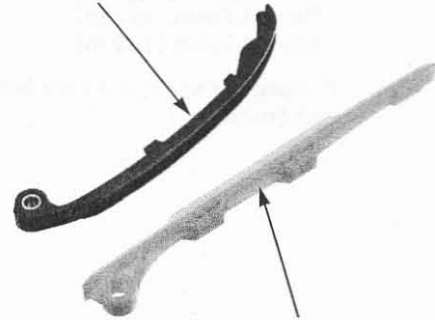

CAM CHAIN GUIDE

Inspect the cam chain tensioner B for excessive wear or damage, replace it if necessary.

CAM CHAIN TENSIONER B

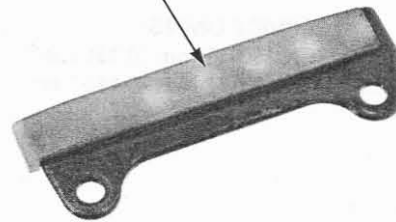

## VALVE GUIDE REPLACEMENT

Chill the replacement valve guides in the freezer section of a refrigerator for about an hour.

*Do not use a torch to heat the cylinder head; it may cause warping.*

Heat the cylinder head to 100 – 150°C (212 – 300°F) with a hot plate or oven.


To avoid burns, wear heavy gloves when handling the heated cylinder head.

Support the cylinder head and drive out the valve guides from combustion chamber side of the cylinder head.

#### TOOL:

Valve guide driver

07JMD-KY20100  
(not available in U.S.A.)

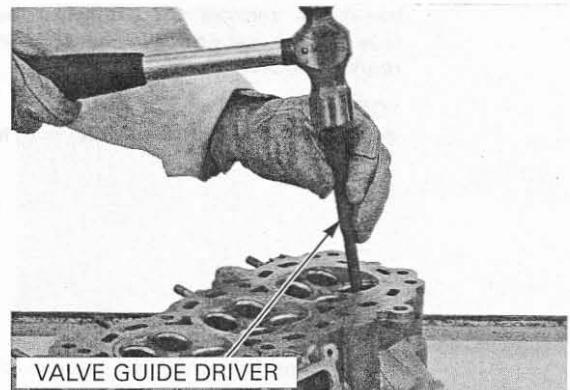

Drive in the guides to the specified depth from the top of the cylinder head.

#### TOOL:

Valve guide driver

07743-0020000  
(not available in U.S.A.)

