



TRANSMISSION/GEARSHIFT LINKAGE


Remove the bolts and gearshift linkage cover.

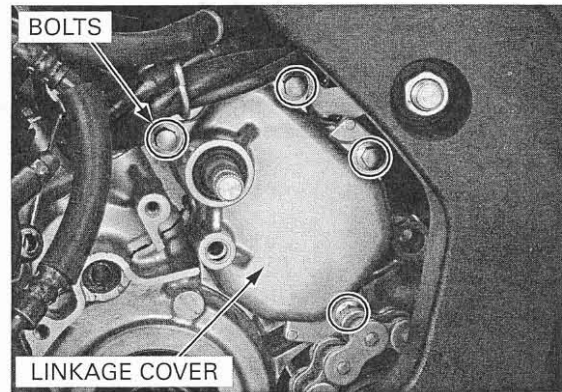

Remove the gasket and dowel pins.

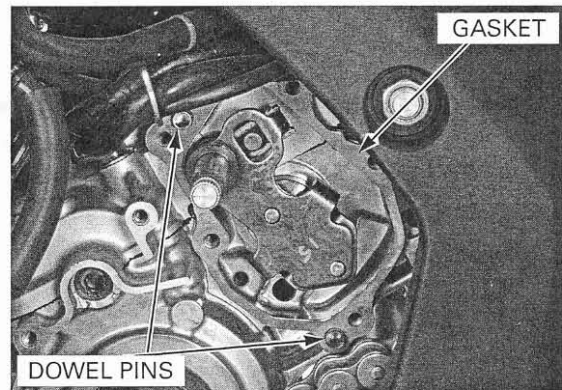

Remove the gearshift spindle and washers.

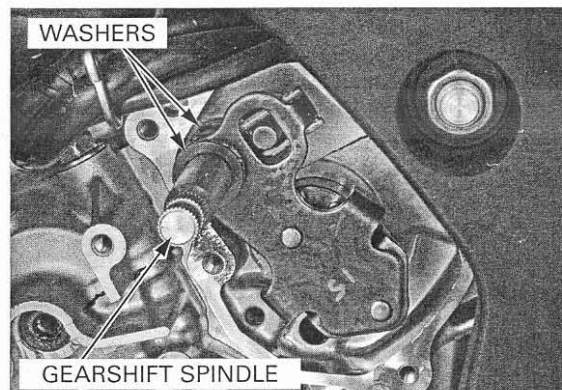

INSPECTION

Check the gearshift spindle for wear, damage or bends.

Check the return spring for fatigue or damage.

If the snap rings are removed, install them with their chamfered side facing the thrust washers.

