

13. CRANKCASE/CRANKSHAFT/BALANCER/PISTON/CYLINDER

COMPONENT LOCATION	13-2	MAIN JOURNAL BEARING.....	13-9
SERVICE INFORMATION	13-3	CRANKPIN BEARING	13-12
TROUBLESHOOTING	13-4	PISTON/CYLINDER	13-15
CRANKCASE SEPARATION.....	13-5	CRANKCASE ASSEMBLY	13-21
CRANKSHAFT.....	13-7	BALANCER.....	13-28