



Install the bearing remover head into the bearing. From the opposite side, install the bearing remover shaft and drive the bearing out of the wheel hub. Remove the distance collar and drive out the other bearing.

TOOLS:

- Bearing remover head, 25 mm 07746-0050800
- Bearing remover shaft 07GGD-0010100

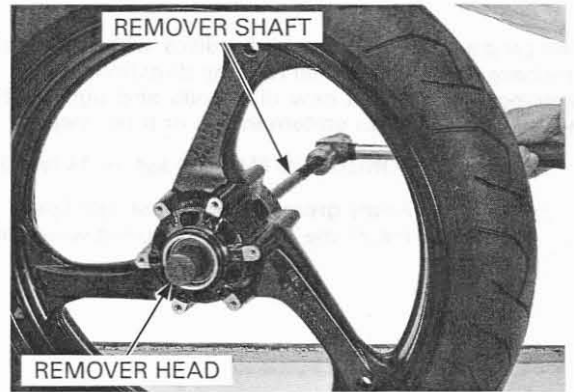

ASSEMBLY

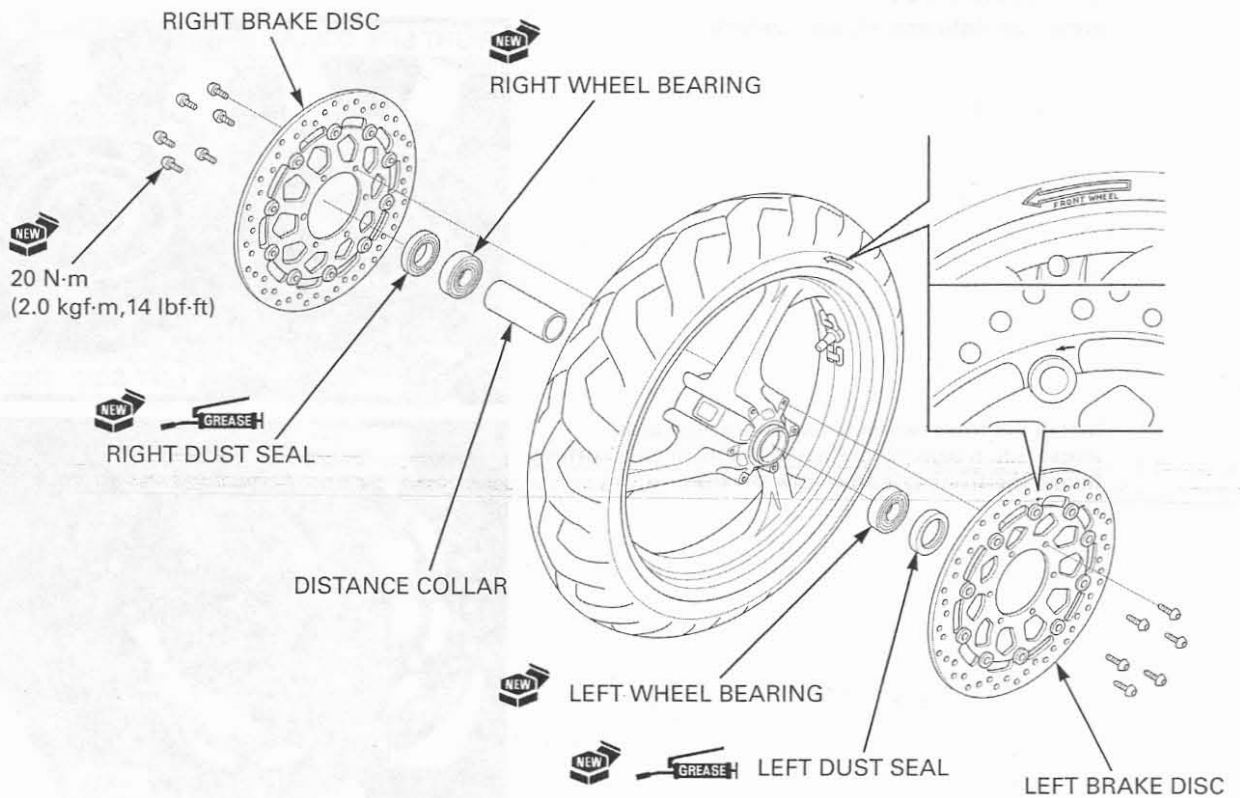

Never install the old bearings. Once the bearings have been removed, the bearings must be replaced with new ones.

Drive in a new right wheel bearing squarely until it is fully seated using the special tools. Install the distance collar, then drive in new left wheel bearing using the same tools.

TOOLS:

- Driver 07749-0010000
- Attachment, 42 x 47 mm 07746-0010300
- Pilot, 25 mm 07746-0040600

