



FRONT WHEEL/SUSPENSION/STEERING

INSTALLATION

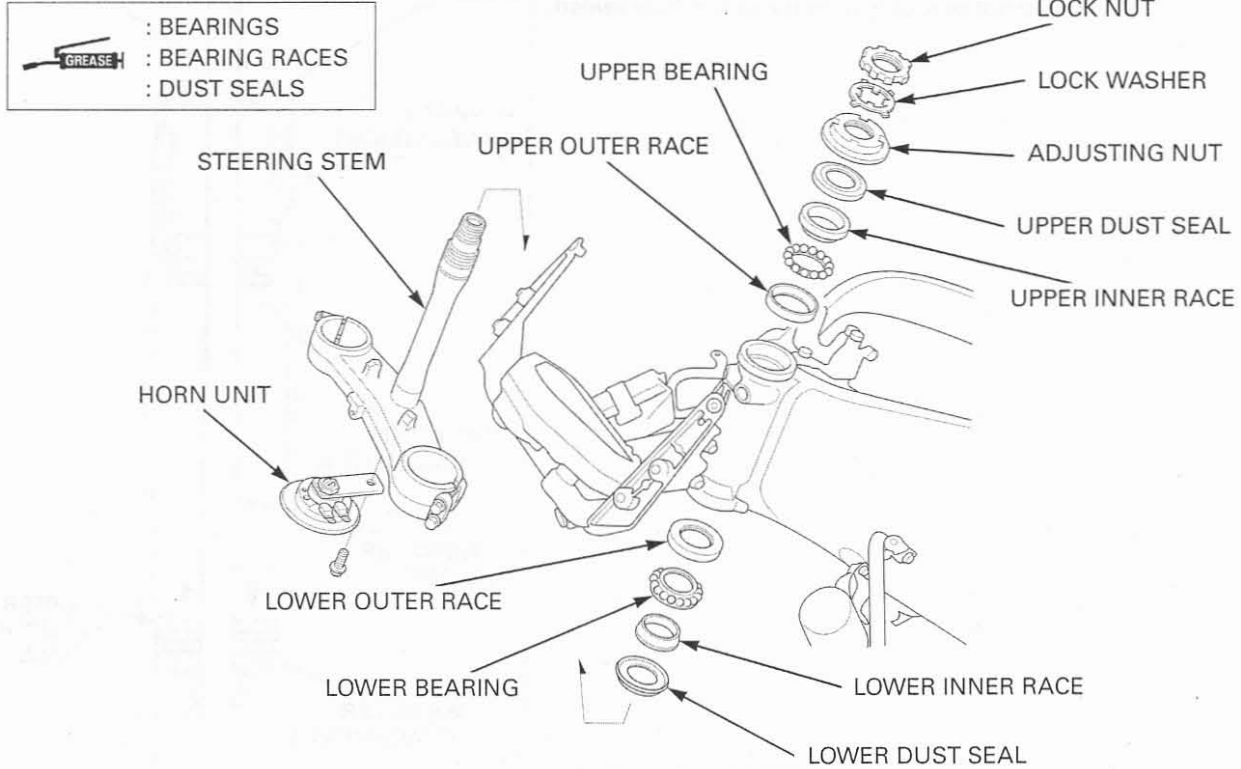

Apply specified grease (page 1-23) to the upper and lower bearings, bearing races and upper dust seal lips.

Install the lower bearing onto the steering stem. Insert the steering stem into the steering head pipe. Install the upper bearing, inner race and upper dust seal.

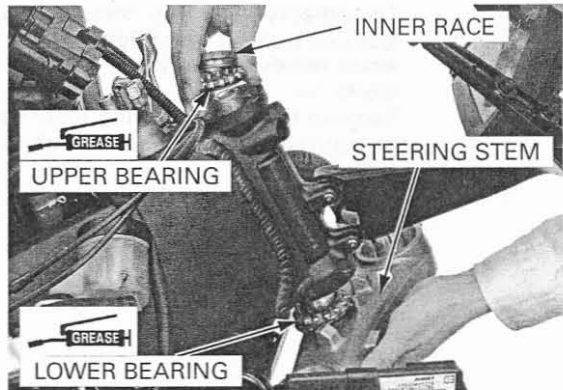

Apply specified grease (page 1-23) to the steering stem adjusting nut threads.

Install and tighten the steering stem adjusting nut to the initial torque.

TOOL:

Steering stem socket 07916-3710101 or 07916-3710100

TORQUE: 20 N·m (2.0 kgf·m, 14 lbf·ft)

