



Remove the bolt and gearshift arm from the gearshift spindle.

It is not necessary to drain the clutch hydraulic system in order to remove the swingarm.


Remove the clutch slave cylinder (page 10-13).

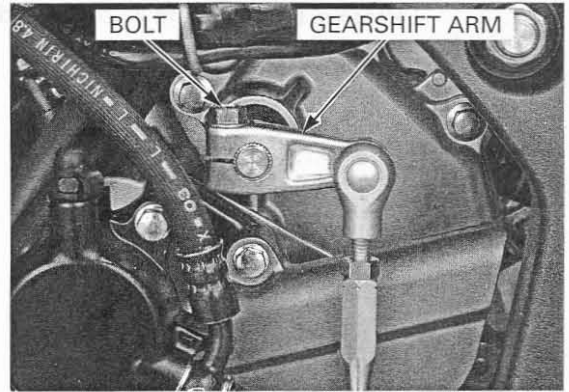

Remove the clutch lifter rod.
Remove the bolts and drive sprocket cover.

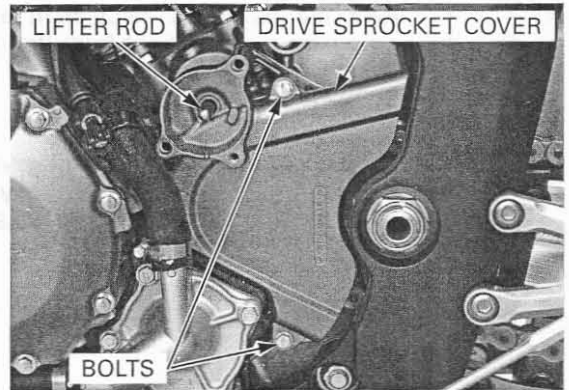

Remove the gasket, spacer and dowel pin.

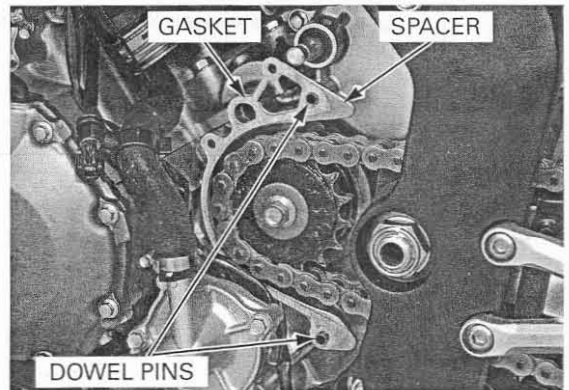

Remove the bolt, washer and drive sprocket.

