

Install the washer and swingarm pivot nut, and tighten the nut to the specified torque.

TORQUE: 113 N·m (11.5 kgf·m, 83 lbf·ft)




Refer to torque wrench reading information on page 15-3 "Service Information".

Hold the swingarm pivot shaft, tighten the pivot adjusting bolt lock nut to the specified torque.

TOOL:
Swingarm lock nut wrench,
5.8 x 47 mm


07YMA-MCF0100 or
07YMA-MCFA100
(U.S.A. only)

TORQUE:
Actual: 64 N·m (6.5 kgf·m, 47 lbf·ft)
Indicated: 58 N·m (5.9 kgf·m, 43 lbf·ft)

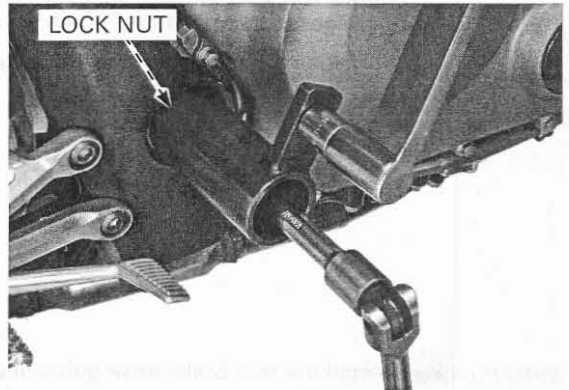

Install the drive sprocket with its marks facing out. Install the washer and sprocket bolt, then tighten the bolt to the specified torque.

TORQUE: 54 N·m (5.5 kgf·m, 40 lbf·ft)

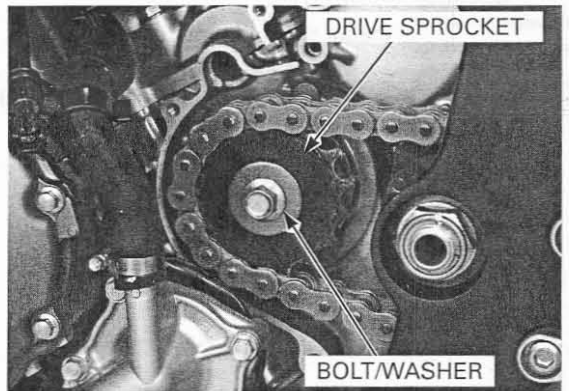

Install the dowel pins, spacer and new drive sprocket cover gasket.

