

BRAKE FLUID REPLACEMENT/ AIR BLEEDING

NOTICE


Spilled fluid can damage painted, plastic, or rubber parts. Place a shop towel over these parts whenever the system is serviced.

- Do not allow foreign material to enter the system when filling the reservoir.

BRAKE FLUID DRAINING

FRONT:


Before removing the reservoir cap, turn the handlebar until the reservoir is parallel to the ground. Remove the screws, reservoir cap, set plate and diaphragm.

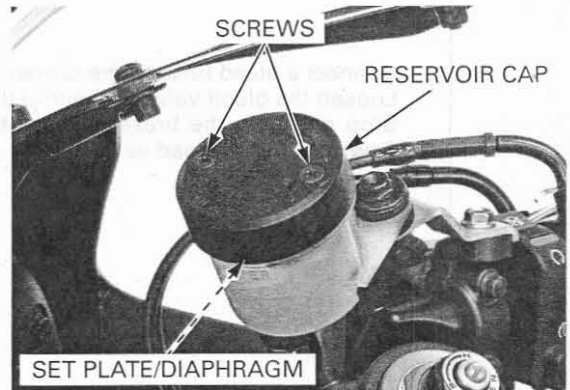

Connect the bleed hose to the master cylinder bleed valve.

Loosen the master cylinder bleed valve, and pump the brake lever.

Stop pumping the brake lever until no more fluid flows out of the bleed valve.

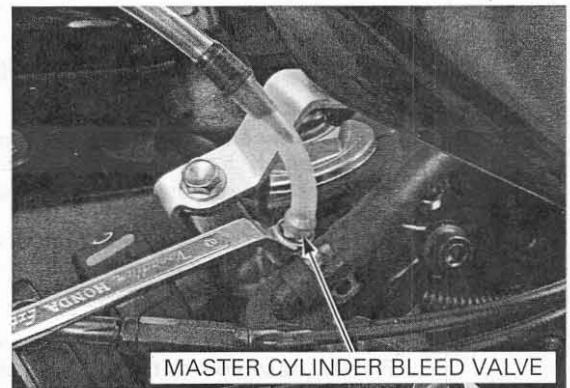

Connect the bleed hose to the caliper bleed valve. Loosen the caliper bleed valve, and pump the brake lever.

Stop pumping the brake lever until no more fluid flows out of the bleed valve.

Perform this operation for the other side brake caliper.

