



## HYDRAULIC BRAKE

Install the new joint seal into the fluid passage on the caliper.

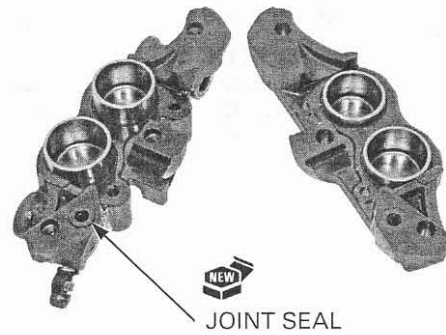

Assemble the caliper halves.  
Apply a locking agent to the caliper assembly torx bolt threads.  
Install and tighten the caliper assembly torx bolts to the specified torque.

**TORQUE: 23 N·m (2.3 kgf·m, 17 lbf·ft)**

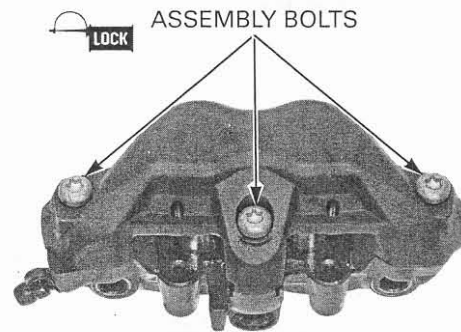

## INSTALLATION


Install the brake pads (page 16-11).

*Make sure that the dowel pins are installed into the caliper bracket properly.*

Install the caliper to the caliper bracket.  
Tighten the new caliper mounting bolts to the specified torque.

**TORQUE: 45 N·m (4.5 kgf·m, 33 lbf·ft)**

Install the brake hose eyelet joint to the caliper body with two new sealing washers and oil bolt.

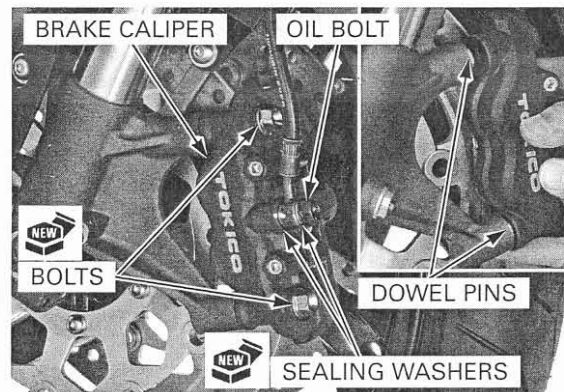

Push the brake hose eyelet joint to the stopper on the caliper, then tighten the oil bolt to the specified torque.

**TORQUE: 34 N·m (3.5 kgf·m, 25 lbf·ft)**

Fill brake fluid and bleed air from the front brake hydraulic system (page 16-8).

