

COMBINATION METER

REMOVAL/INSTALLATION

Remove the upper cowl (page 3-12).


Remove the three screws/washers and combination meter from the bracket.

Install the combination meter in the reverse order of removal.



DISASSEMBLY/ASSEMBLY

Remove the screws.

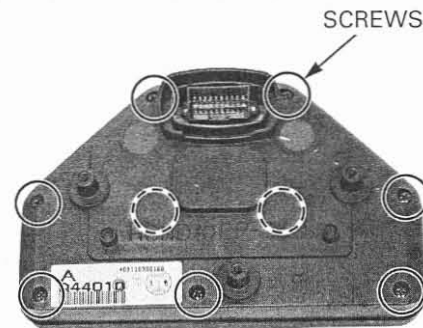

Remove the meter upper case, circuit board and lower case.

Assemble the meter upper case, circuit board and lower case, then tighten the screws to the specified torque.

TORQUE: 1.0 N·m (0.1 kgf·m, 0.7 lbf·ft)

