



Check for continuity between the terminals. There should be continuity with the brake pedal applied, and there should be no continuity when the brake pedal is released.

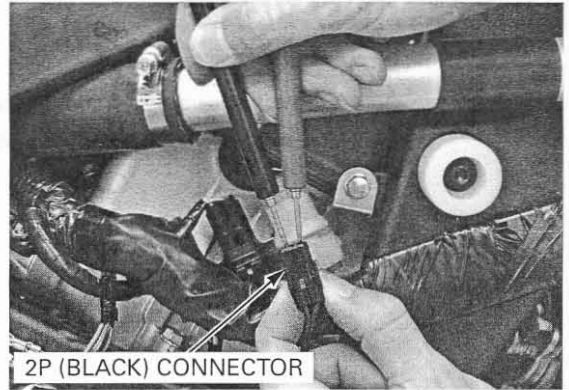


CLUTCH SWITCH

Disconnect the clutch switch connectors. There should be continuity with the clutch lever applied, and there should be no continuity when the clutch lever is released.

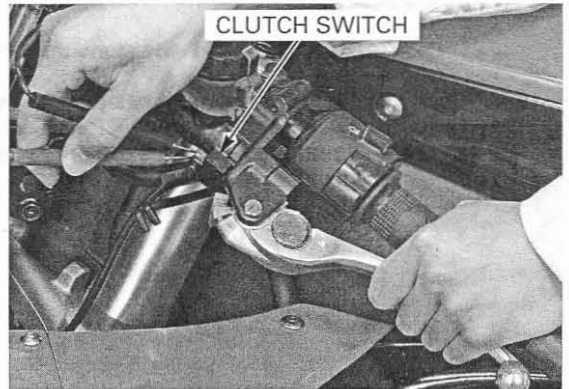

NEUTRAL SWITCH

Remove the exhaust pipe (page 3-30). Disconnect the neutral switch connector from the switch.

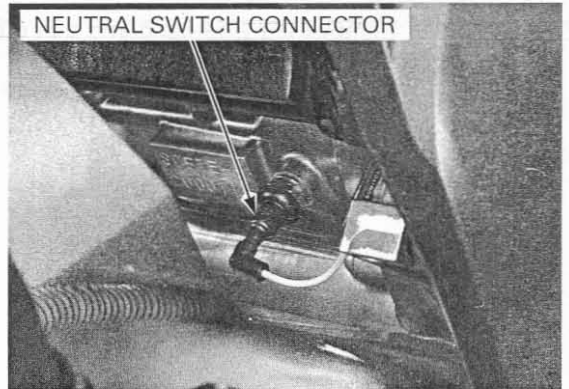

Shift the transmission into neutral and check for continuity between the Light green wire and body ground. There should be continuity with the transmission in neutral, and no continuity when the transmission is in gear.

