

SEAT

REMOVAL

Unlock the seat using the ignition key.


Remove the seat backward.



INSTALLATION

Align the seat hooks with the frame brackets and install the seat.

Push the rear end of the seat and lock it.

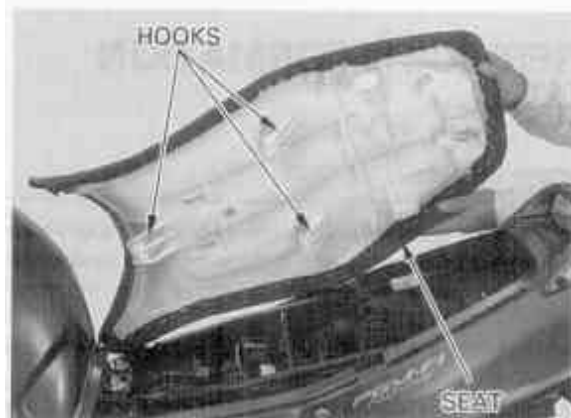

SEAT COWL

REMOVAL

Remove the seat (see above).

Remove the rear grip mounting bolt caps.



Remove the two socket bolts.
Remove the setting bolts, collars and rear grip.

