


FRAME/BODY PANELS/EXHAUST SYSTEM

Remove the special bolts and upper cowl covers.



Remove the lower cowl (page 2-3).

Remove the inner panel trim clips.

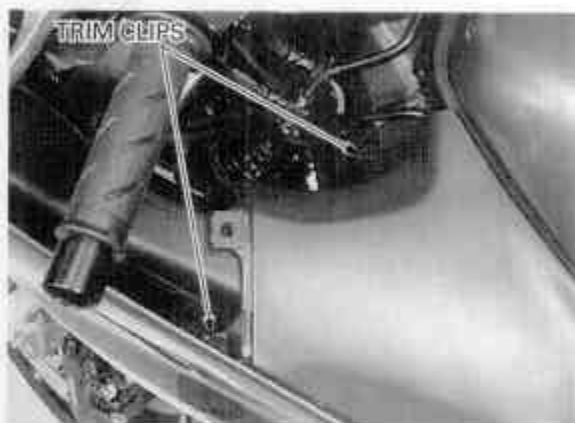

Release the inner panel from the fuel tank and frame bosses.



Remove the inner panel.

