

AIR CLEANER

Disconnect the fuel level/reserve sensor 3P (Black) connector.



Remove the fuel tank rear mounting bolts.



Release the inner panel bosses from the fuel tank.



Pull out the fuel tank front bracket rubbers from the frame.

