


FUEL SYSTEM (Programmed Fuel Injection)

No. 1/2 starter valve:


Remove the screws and wax unit body mounting screws.



Remove the starter valve arm screws and starter valve arms.

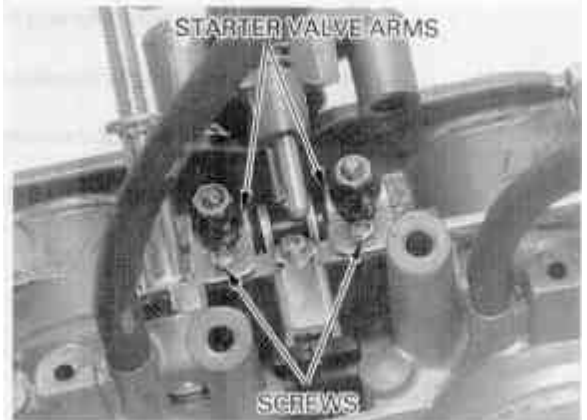

Loosen the lock nuts and remove the starter valve assembly.

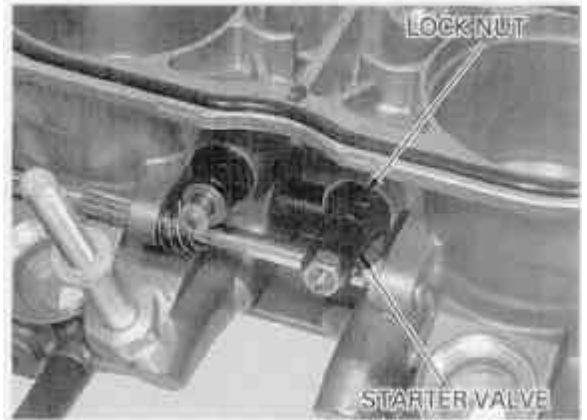

Clean the starter valve bypass using compressed air.

CAUTION:

Do not apply commercially available carburetor cleaners to the inside of the throttle bore, which is coated with molybdenum.

